




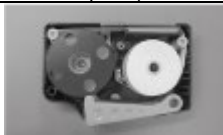




Cassette Reel

1) Open the shutter by gripping lever. New cleaning tape will appear.	2) Push and slide a ferrule end face while gripping the lever
3) Close the shutter by releasing the grip.	
	
How to replace the Cassette Reel.	
1) Turn the screw with a coin, Open the cover. Take out the cassette reel and the winding reel.	2) Pull out the tape from the winding reel.
	
3) Load the new tape on the winding reel with a bonding tape.	4) Set up the winding reel and the cassette reel in the body. Set the tape (cleaning cloth on the outside of guide roller and between wiping board and template).
	
5) Hook the cover on the body.	6) Grip the lever 2 or 3 times and to check the tape is moving smoothly.
