



# Quick Assembly Connector (QAC/SC) Assembly Manual

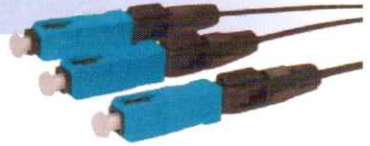


## 1. Procedure

1

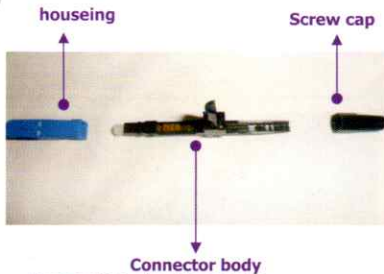


- Arrange for a FAOC to assemble.

2

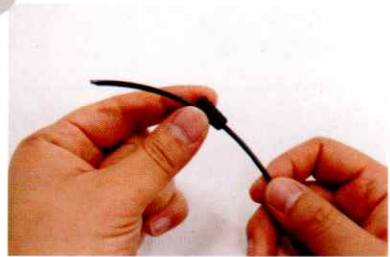


- Insert screw cap into optical cable.

3

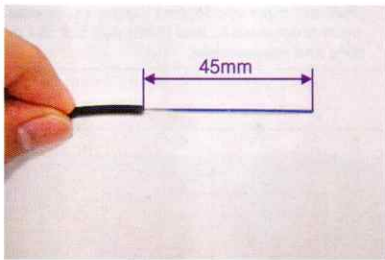


- Strip the coating of optical cable over 45mm.

4

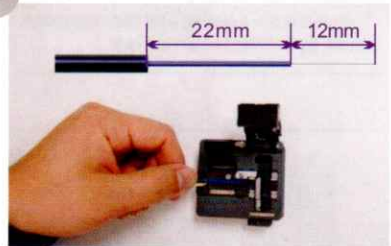


- Cut off the fiber at the length of 12 mm using optical fiber cleaver.

5

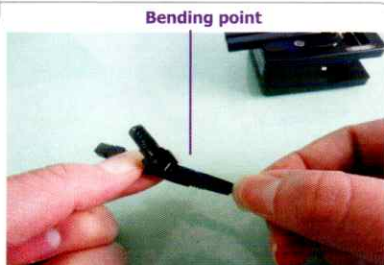

- Insert optical cable into the fiber guide on the boot when it is checked the bending of cable as above, stop inserting,

6

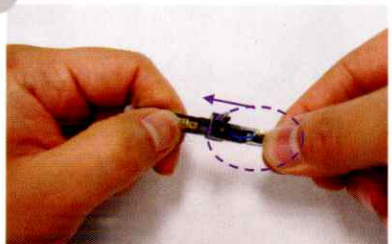


- And maintaining the cable bending with right hand, push the connecting holder forward to the end and fix the fiber.

7



-Take the boot cover down ,connect the screw cap with boot by turning it

8

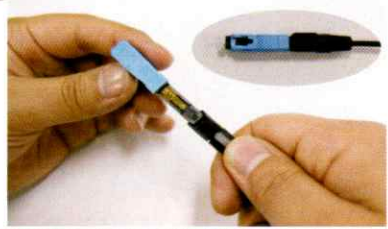

Turn the protrusion of housing toward the bottom and unite it to the body.

- Completion.


## 2. Reassembling

1




-Pull out the housing and then separate them by turning the screw cap

2

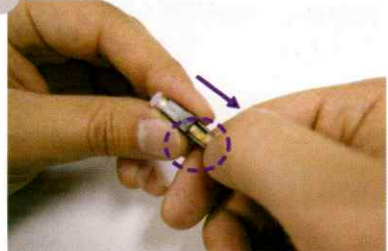

-Pull the fiber connecting holder in reverse with procedure 8. And then, pull out the cable and reassemble.

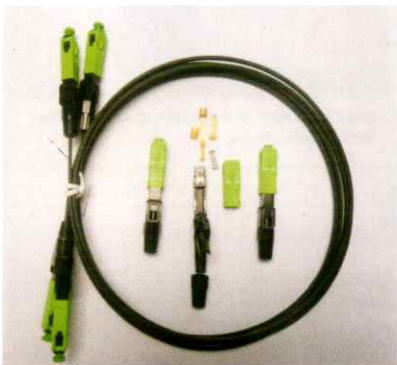

SC/APC Quick Assmby connector



Tools or kits

※ If you have any questions in assembling , please contact us.